

ECOBOILER COUNTERTOP TAP



ECOBOILER T5 1000660	ECOBOILER T10 1000661	ECOBOILER T20 1000662	ECOBOILER T30 1000663	DIMENSIONS
				
<ul style="list-style-type: none"> • 5, 10, 20 or 30 litre options • Easy to descale • Removeable drip tray 		<ul style="list-style-type: none"> • Made from 95% recyclable materials • Energy-efficient with precise temperature 		

SEE TABLE FOR
PRODUCT DIMENSIONS

TAP BOILERS IN A RANGE OF VOLUMES FOR CATERING LOCATIONS SUCH AS CAFÉS, HOTELS, RESTAURANTS AND CANTEENS.

BOILERS

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	OUTPUT PER HOUR	CUPS (180ml) PER HOUR	DIMENSIONS (D x W x H mm)	TAP TO COUNTER (T mm)	PLUMBING REQS
Ecoboiler T5 1000660	2.8kW	5 L	28 L	156	515 x 210 x 465	185	3/4" BSP
Ecoboiler T10 1000661	2.8kW	10 L	28 L	156	515 x 210 x 590	185	3/4" BSP
Ecoboiler T20 1000662	2.8kW	20 L	28 L	156	570 x 240 x 690	185	3/4" BSP
Ecoboiler T30 1000663	5.6kW	30 L	56 L	311	570 x 300 x 690	185	3/4" BSP


PACKAGING

NAME ORDER CODE	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QUANTITY PER PALLET
Ecoboiler T5 1000660	10kg	550 x 560 x 290	18
Ecoboiler T10 1000661	12.5kg	290 x 690 x 560	18
Ecoboiler T20 1000662	19kg	600 x 350 x 840	10
Ecoboiler T30 1000663	22kg	600 x 380 x 840	10




ECOBOILER T5, T10, T20, T30


ECOBOILER T5 1000660

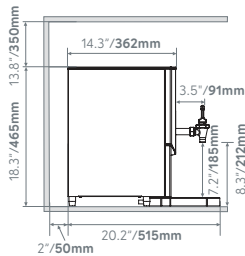


ECOBOILER T10 1000661

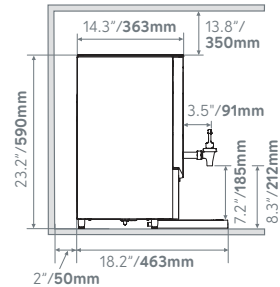

ECOBOILER T20 1000662

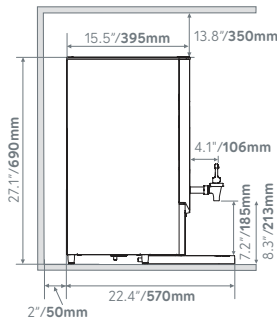

ECOBOILER T30 1000663

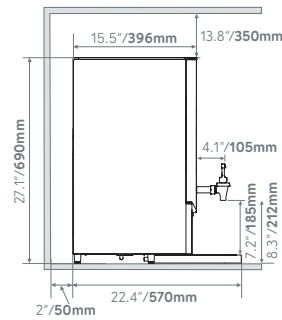

VENTILATION REQUIREMENTS

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Connect straight tailpiece of the hose to the stop valve fitting. Make sure that the pre-attached sealing washer is fitted.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, especially for new installations.

- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into a suitable socket and press power button on the front of the machine marked 'Power'.
NOTE: On the T5 the 'Power' button light also acts as the "Ready/Status" indicator.
- The "power on" light will glow green and the machine will fill to a safe level, above the elements, before heating.
- The "Ready/Status" light will cycle two red flashes while the machine is filling to the safe level.
- Whilst the machine is above the safe level and filling, the "Ready/Status" light will glow orange.
- The "Ready/Status" light will glow green when the machine is both full and up to normal operating temperature, allow approx 15 minutes.
- The boiler is now ready for use.

NOTE: Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.